

Headless Licensing

Topology	1
License Server Installation	3
FlexNet Setup	3
Node Lock License	3
Dongle License	3
Network License	4
Headless License Setup	4
Configuring the License Source.....	5
Configuring the Requested Licenses List	5
Configuring HPC Mode.....	5
License Server as a Service/Daemon	6
Inspecting Logs.....	7
Running Simulations	7
Command Line Argument	7
VS API.....	7
Par File Keyword	8
Running.....	8

Starting with the 2020 software release, VehicleSim (VS) products (BikeSim®, CarSim®, TruckSim®, and SuspensionSim®) support a lightweight licensing mechanism that is well-suited for High-Performance Computing (HPC) installations, especially on Cloud or Virtualized hardware with ephemeral lifetimes. When using Headless Licensing, VS Math Models can be run on fresh machine installations with minimal license setup. Licenses are managed by a central networked server.

In this configuration, a single license server machine can support 1000+ concurrent solver instances running on remote machines, depending on the software package and seat count available at your organization.

Headless Licensing is supported by all solver products (BikeSim®, CarSim®, TruckSim®, and SuspensionSim®) and works on both Windows and Linux operating systems.

Note This memo uses CarSim example, but the instructions are interchangeable with BikeSim, TruckSim, and SuspensionSim software products.

Topology

The key difference of Headless Licensing, compared to traditional FlexNet network licensing, is that the CarSim License Manager (`cs-lm-cl i`) program moves from the simulation machine to

the “License Server Machine,” and the CarSim License Manager program functions as the license server instead of FlexNet (Figure 1).

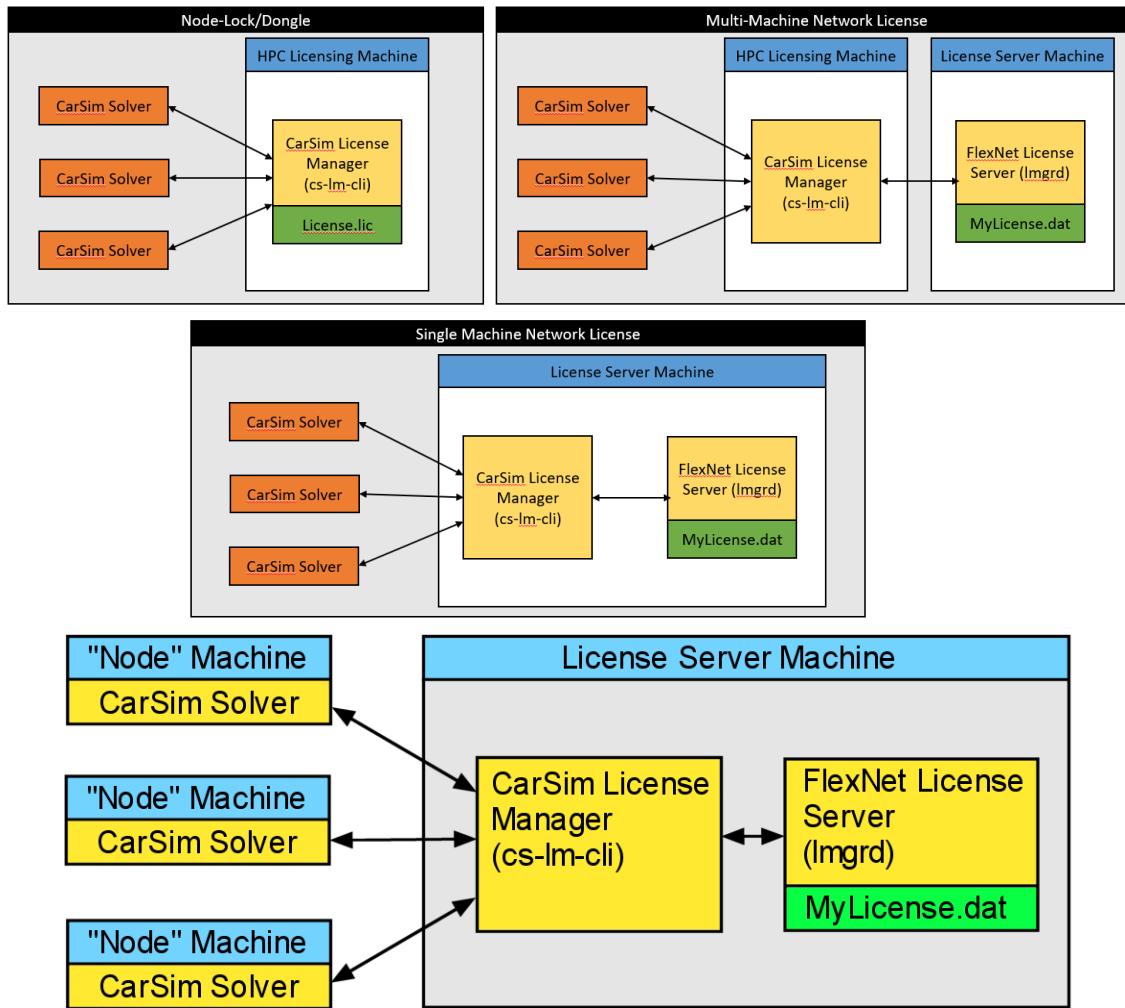


Figure 1. Headless Licensing topology diagram.

In this configuration, the simulation machines are freed from license configuration and setup concerns.

Headless Licenses are counted and managed by the CarSim License Manager, acting as a server. When a simulation machine runs the CarSim solver, one `carsimheadless` license feature is requested from the license server machine and is held by the solver for the duration of the simulation run.

In the case of simultaneous simulations on one machine, each process requires one `carsimheadless` license feature.

License Server Installation

A specially configured `cs-lm-cli` process runs on a designated license server machine and coordinates license access for all instances of CarSim participating in the Headless licensing system. The server requires a FlexNet Server instance and a license file provided by VehicleSim.

For instructions on setting up the license server machine, skip ahead to the sections for FlexNet Setup and Headless License .

Table 1. Example Network Server Installers

File Name	Description
<code>Setup_NetworkLicense_2021.1_r12345.exe</code>	Windows Installer
<code>mechsimalicserver_2021.1_Redhat_x86_64_r12345.tar.gz</code>	Red Hat Installer (Linux)
<code>mechsimalicserver_2021.1_Ubuntu_x86_64_r12345.tar.gz</code>	Ubuntu Installer (Linux)

FlexNet Setup

All License Server installations are ultimately backed by the FlexNet licensing architecture, as is the case for other VehicleSim software.

FlexNet setup should take place on the designated server machine using one of the installation packages listed in *Table 1. Example Network Server Installers*.

The FlexNet licensing can take the form of a node lock, dongle, or network-style license, and this license will be installed on the machine you have designated as the Headless License Server.

In the case of a FlexNet network license, the CarSim License Manager and FlexNet Network License Server software may reside on different machines, but this guide will demonstrate installation on the same machine for the sake of simplicity.

Node Lock License

A node lock license takes the form of a license file (`*.lic`) supplied by VehicleSim and is tied to a machine's unique identity. You will place the license file in a common location on the machine.

For Windows:

```
C:\FlexLM\K123456.lic
```

For Linux:

```
~/.config/mechsimalic/K123456.lic
```

Dongle License

A dongle license takes the form of a paired license file (`*.lic`) and hardware dongle supplied by VehicleSim. The license file is tied to the unique ID of the hardware dongle. You will connect the dongle to a USB port and place the license file in a common location on the machine.

For Windows

C:\FlexLM\K123456.lic

For Linux (RedHat)

~/.config/mechsime/K123456.lic

Network License

A network license takes the form of a license file (*.dat) supplied by VehicleSim and is tied to a machine's unique identity and network host name. FlexNet network license server software ("lmgrd") runs on the network server machine and serves licenses to multiple clients using VehicleSim software. You will be installing the license file and FlexNet license server on your designated machine. The following documents are offered with the FlexNet License Server installer and offer detailed instructions for setting up the FlexNet server.

For Windows: [**FlexNet Network License Setup.pdf**](#)

For Linux: [**License Server Linux Guide.pdf**](#)

Headless License Setup

The Headless License is typically checked out from the same machine running the FlexNet server (see FlexNet Setup). The command line version of the CarSim License Manager functions as the license server once HPC Mode is enabled via configuration file.

Example Windows Program Location

C:\Program Files (x86)\CarSim2020_Prog\Programs\cs-lm-cli.exe

Example Linux Program Location(s)

/opt/carsim_2020/bin/cs-lm-cli

/opt/mechsimecsimserver_2020/bin/cs-lm-cli

When HPC Mode is enabled, all loaded license features will be made available to CarSim Solvers via the network. Note that in this mode, license features will not be available for usage on the local machine unless the Headless license is being used.

The CarSim License Manager functionality is controlled via configuration files in the following locations:

Windows Configuration File Location

C:\FlexLM\

Linux Configuration File Location

~/.config/mechsime/

Configuration files are either installed by the installer program or will be generated automatically the first time you run the CarSim License Manager (*Table 1*).

Table 2. Contents of license directory.

Item	Type	Note
license_source.cfg	Text File	Configures the License Manager to work with network licenses or license files
requested_licenses.cfg	Text File	Configures which licenses will be used
hpc.cfg	Text File	Configures HPC Mode
K*****.lic	License File(s)	(Optional) Installed by user

Configuring the License Source

For a FlexNet network license, the license source should be the hostname of the FlexNet License Server preceded by an “@” symbol. Open `license_source.cfg` in a text editor, and replace the contents with a hostname of the following format:

```
@serverhostname
```

You may reference the license file (*.dat) supplied by VehicleSim to find the hostname.

For a Node Lock or Dongle license, the license source should be the path to the license file or its parent directory. Open `license_source.cfg` in a text editor, and replace the contents with one of the following paths, depending on your operating system:

Windows

```
C:\FlexLM\
```

Linux

```
~/.config/mechsim/
```

Alternatively, you can use the `-configpath` commandline parameter to specify a custom configuration path.

Configuring the Requested Licenses List

The requested license list contains a list of license features and seat counts you would like to make available via the license server. Open `requested_licenses.cfg` in a text editor, and type a list of feature names followed by seat counts, in the following style:

```
carsimheadlessxx 10
```

You may reference the license file (*.lic or *.dat) supplied by VehicleSim to see the license features available to you.

Note that the seat count for `carsimheadlessxx` ultimately determines the maximum number of simultaneous solver simulations in the above example.

Configuring HPC Mode

HPC settings are configured by the `hpc.cfg` file.


Windows

```
C:\FlexLM\hpc.cfg
```

Linux

```
~/.config/mechsim/hpc.cfg
```


To enable Headless licensing, open the file in a text editor, and change the following value from “False” to “True:

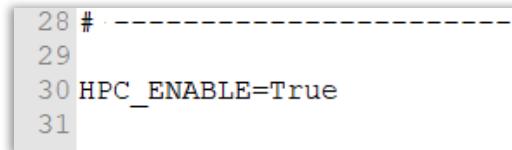

```
28 # -----
29
30 HPC_ENABLE=True
31
```

Figure 2. View of hpc.cfg file.

Start CarSim License Manager, and you will see a special message showing that it is running a License Server in HPC Mode.

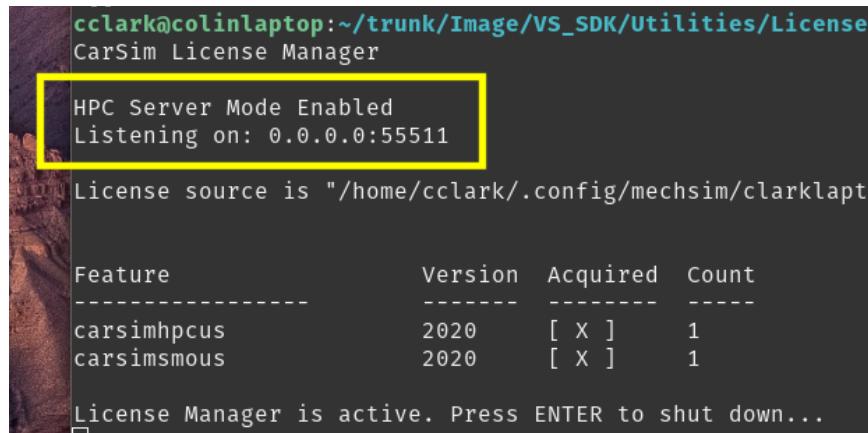

```
cclark@colinlaptop:~/trunk/Image/VS_SDK/Utilities/License
CarSim License Manager
HPC Server Mode Enabled
Listening on: 0.0.0.0:55511
License source is "/home/cclark/.config/mechsim/clarklapt

Feature           Version  Acquired  Count
-----
carsimhpcus      2020    [ X ]      1
carsimsmous      2020    [ X ]      1

License Manager is active. Press ENTER to shut down...
```

Figure 3. View of cs-lm-cli in Headless Licensing mode.

To bind to a specific network adapter or network port, use the following keywords in the hpc.cfg file:

```
HPC_SERVER_PORT=[Integer 0-65535]
HPC_ENABLE=[True/False]
```

License Server as a Service/Daemon

We recommend running the License Server (cs-lm-cli) as a daemon process, such that it comes online automatically when the machine boots.

On Linux, run the `installLicDaemon.sh` or `configure_cs-lm-cli_daemon.sh` script located in the `/Install/` area of the unpacked installer tarball directory, and `cs-lm-cli` will be installed as a daemon.

On Windows, running `cs-lm-cli.exe` as a service is currently unsupported, but the server can be started manually or by script in a command prompt window.

Inspecting Logs

Log files for the License Server are written to the following locations:

Windows Log File Location

```
%APPDATA%\mechsim\cs-lm-cli.log
```

Linux Log File Location

```
/var/log/cs-lm-cli.log
```

Running Simulations

The sole requirement for running the solver in Headless Licensing mode is to supply the license server network address, which causes the solver to seek licenses from the server rather than locally. There are three methods available.

Command Line Argument

The command line interface wrapper for CarSim (`carsim-cli`) supports the `hpclicensingaddress` command line argument, and it is used as follows:

```
carsim-cli --hpclicensingaddress 192.168.0.1
```

VS API

The C API function `vs_set_hpc_licensing_address()` is used to set the license server address from within a program hosting the solver library (.dll or .so).

Figure 4 shows an example of its usage.

```
char solverPath[FILENAME_MAX] = "";
vs_get_dll_path("simfile.sim", solverPath)
int solverLib = vs_load_library(solverPath);
vs_get_api(solverLib, solverPath);

vs_set_hpc_licensing_address("192.168.0.1");

vs_setdef_and_read("simfile.sim", NULL, NULL);
vs_initialize(0, NULL, NULL);
vs_run("simfile.sim");
```

Figure 4. Example of C code using `vs_set_hpc_licensing_address()`.

Par File Keyword

The keyword HPC_LICENSING_ADDRESS is used to set the license server address from either the parse file (*.par) data or from the VehicleSim Browser in a yellow field.

Figure 5 shows an example of its usage.

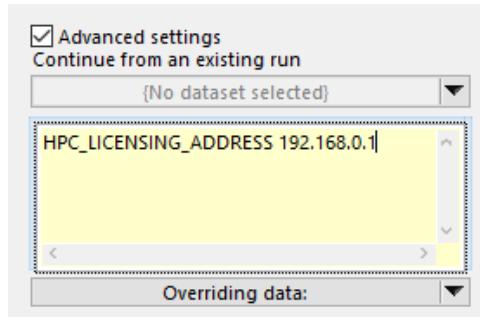


Figure 5. Example of HPC_LICENSING_ADDRESS in the VS Browser.

Running

If Headless Licensing is configured correctly, you may execute a simulation run via your chosen method (e.g. VS Browser, CarSim Command Line Wrapper, custom wrapper). There is no distinction between a run using local licensing vs Headless licensing.

The solver will request the “carsimheadless” (or similar) license feature from the License Server and hold it for the duration of the run.

If the solver has trouble obtaining the license, you will see an error message that shows the expected address of the license server (Figure 6).

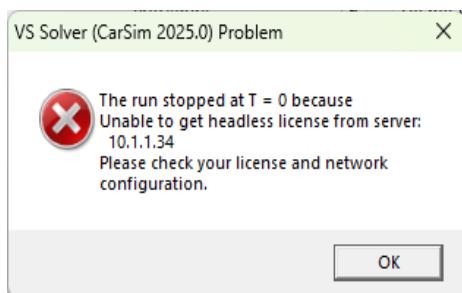


Figure 6. Example of HPC_LICENSING_ADDRESS in the VS Browser.